

**AIRCRAFT PARKING /  
DOCKING CHART - ICAO**

APRON ELEV 1026 FT

CLUJ TOWER 118.705  
CLUJ TOWER ALTN 134.400  
CLUJ ATIS 125.525

**CLUJ NAPOCA  
Avram Iancu ( LRCL)  
APRON 2**

INS COORDINATES FOR AIRCRAFT STANDS

INS10 46°47'13.65"N 023°41'36.81"E  
INS11 46°47'12.24"N 023°41'37.49"E  
INS12 46°47'12.23"N 023°41'53.54"E  
INS13 46°47'08.61"N 023°41'39.20"E  
INS14 46°47'07.14"N 023°41'32.65"E  
INS15 46°47'07.07"N 023°41'39.94"E  
INS16 46°47'05.60"N 023°41'33.39"E  
INS17 46°47'05.54"N 023°41'40.68"E  
INS18 46°47'04.06"N 023°41'34.12"E

TWY D 18 M WIDE  
TWY G 25 M WIDE

VAR 5°E 2015  
ANNUAL RATE  
OF CHANGE 7.0°E

Changes: TWR Freq.

Stand no.	Aircraft	Maximum Aircraft Type
10 - 18	Aircraft with wingspan = 36m (Code letter C)	A321 / B737 - 800W

BEARING STRENGTH FOR STANDS 10 - 11 116/R/B/W/T  
BEARING STRENGTH FOR STAND 12 36/R/D/W/T  
BEARING STRENGTH FOR STANDS 14, 16, 18 94/R/B/W/T  
BEARING STRENGTH FOR STANDS 13, 15, 17 117/R/B/W/T  
BEARING STRENGTH FOR Taxiway C 94/R/B/W/T  
BEARING STRENGTH FOR Taxiway E 36/R/D/W/T  
BEARING STRENGTH FOR TWY G 114/R/B/W/T  
BEARING STRENGTH FOR TWY D 36/R/D/W/T

Self-parking procedure applicable at stands 10, 11, 13, 14, 15, 16, 17, 18.  
Exit with push-back and marshaller assistance.  
Self-maneuvring procedure applicable at stand 12.

LEGEND

AIRCRAFT STAND MANOEUVRING GUIDANCE LIGHT	
FLOODLIGHTS	
TO AIRCRAFT STAND	
TAXI GUIDANCE LINE	
ATC SERVICE BOUNDARY	
APRON SAFETY LINES	
INTERMEDIATE HOLDING POSITION	
TWY CENTRE LINE / EDGE LIGHTS	
INS CHECK POINT	

