

**AIRCRAFT PARKING /  
DOCKING CHART - ICAO**

APRON ELEV 1026 FT

CLUJ TOWER 118.705  
CLUJ TOWER ALTN 134.400  
CLUJ ATIS 125.525

**CLUJ NAPOCA  
Avram Iancu ( LRCL)  
APRON 2**


INS COORDINATES FOR AIRCRAFT STANDS

INS10 46°47'13.65"N 023°41'36.81"E  
INS11 46°47'12.24"N 023°41'37.49"E  
INS12 46°47'12.23"N 023°41'53.54"E  
INS13 46°47'08.61"N 023°41'39.20"E  
INS14 46°47'07.14"N 023°41'32.65"E  
INS15 46°47'07.07"N 023°41'39.94"E  
INS16 46°47'05.60"N 023°41'33.39"E  
INS17 46°47'05.54"N 023°41'40.68"E  
INS18 46°47'04.06"N 023°41'34.12"E

TWY D, E 18 M WIDE  
TWY C, G 25 M WIDE

↑  
VAR 5°E 2015  
ANNUAL RATE  
OF CHANGE 7.0°E

Changes: BEARING STRENGTH OF TWY D, TWY E, STAND 12.

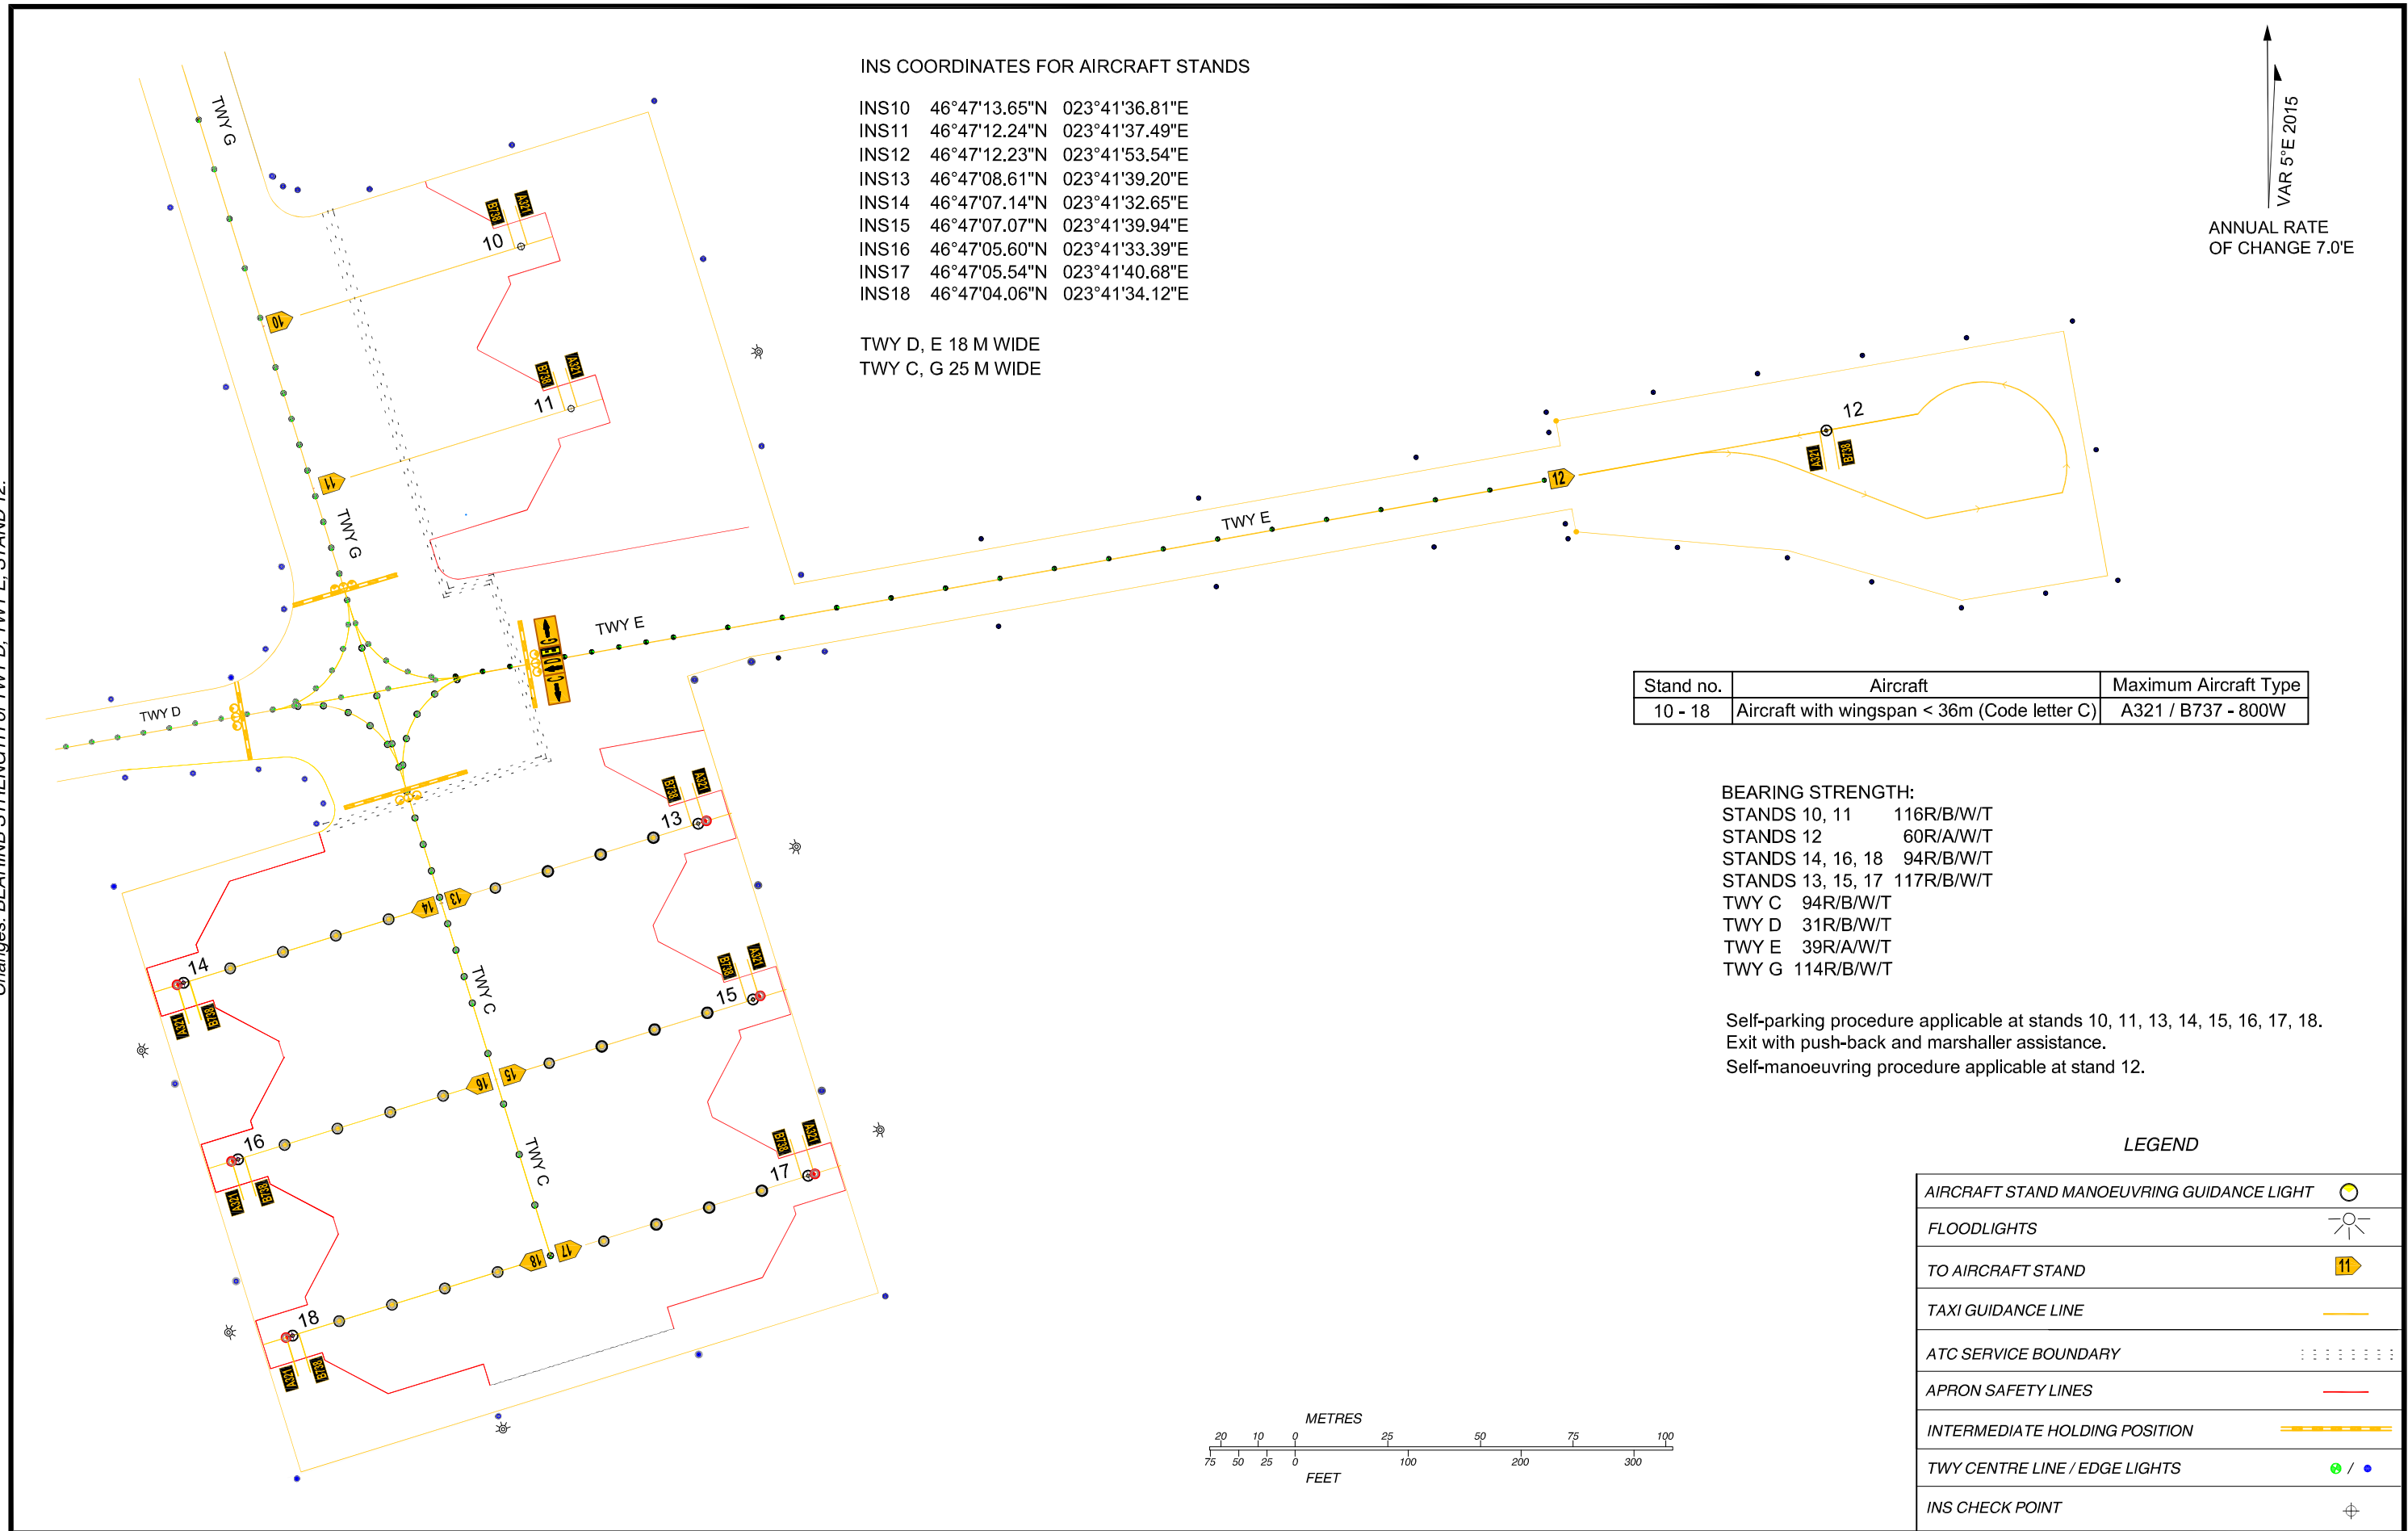

Stand no.	Aircraft	Maximum Aircraft Type
10 - 18	Aircraft with wingspan < 36m (Code letter C)	A321 / B737 - 800W

BEARING STRENGTH:  
STANDS 10, 11 116R/B/W/T  
STANDS 12 60R/A/W/T  
STANDS 14, 16, 18 94R/B/W/T  
STANDS 13, 15, 17 117R/B/W/T  
TWY C 94R/B/W/T  
TWY D 31R/B/W/T  
TWY E 39R/A/W/T  
TWY G 114R/B/W/T

Self-parking procedure applicable at stands 10, 11, 13, 14, 15, 16, 17, 18.  
Exit with push-back and marshaller assistance.  
Self-maneuvring procedure applicable at stand 12.

LEGEND

AIRCRAFT STAND MANOEUVRING GUIDANCE LIGHT	○
FLOODLIGHTS	☀
TO AIRCRAFT STAND	➔
TAXI GUIDANCE LINE	—
ATC SERVICE BOUNDARY	⋯⋯⋯
APRON SAFETY LINES	—
INTERMEDIATE HOLDING POSITION	—
TWY CENTRE LINE / EDGE LIGHTS	● / ●
INS CHECK POINT	⊕